



1. Prepare a new fuser unit.



2. Hold the handle (A) to open the scanner unit.

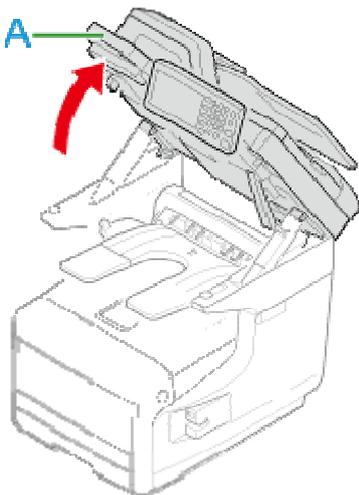


3. Insert your finger into the lever (B) on the right side of the machine and pull the front cover open lever (1) to open the front cover (2) forward.

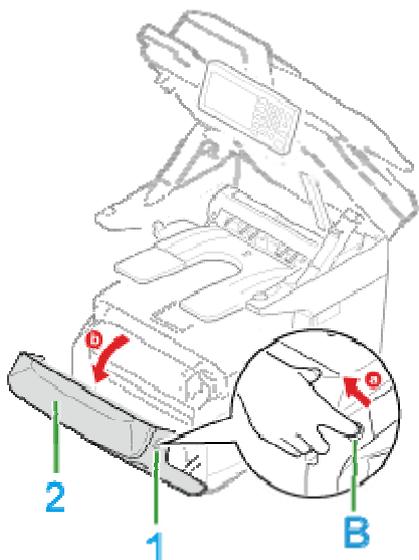


4. Press the button (C) and open the Output Tray (3).

Possible to get burned.


Since the fuser unit gets hot, carry out the operation carefully, and when lifting it up you must hold it by the handle. Do not try to hold it whilst it is hot. Wait until it has cooled down and then carry out the operation.

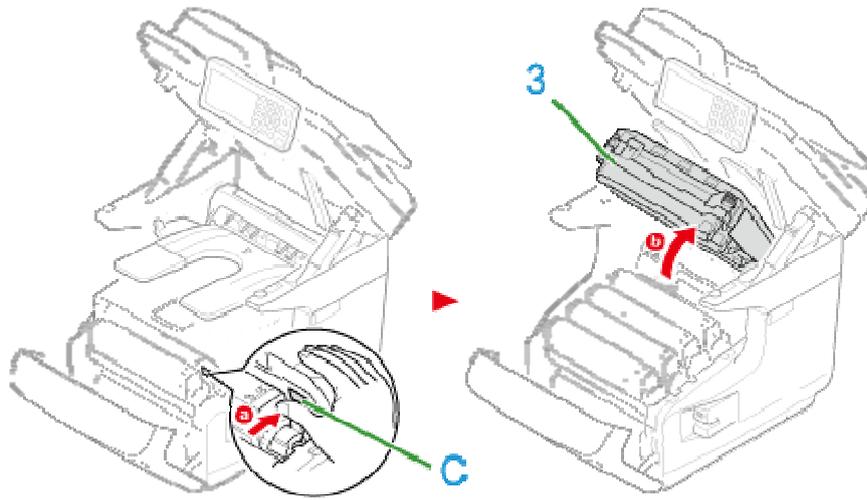


5. Pull forward the left locking lever (4) of the fuser unit to unlock.

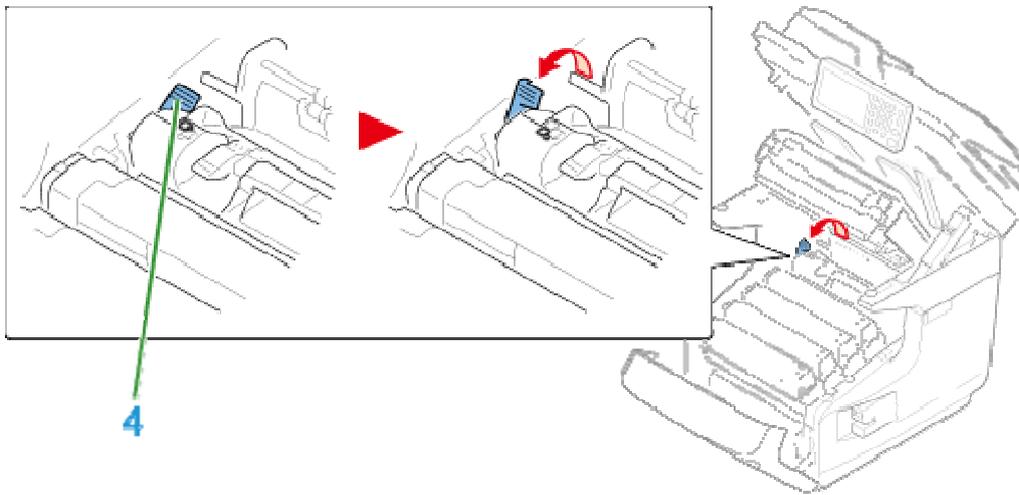


6. Hold the fuser unit handle (5) and lift the fuser unit out of the machine.

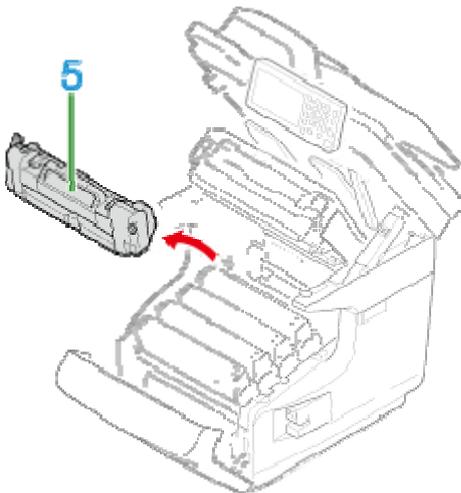


7. Hold the handle and place the new fuser unit into the machine.

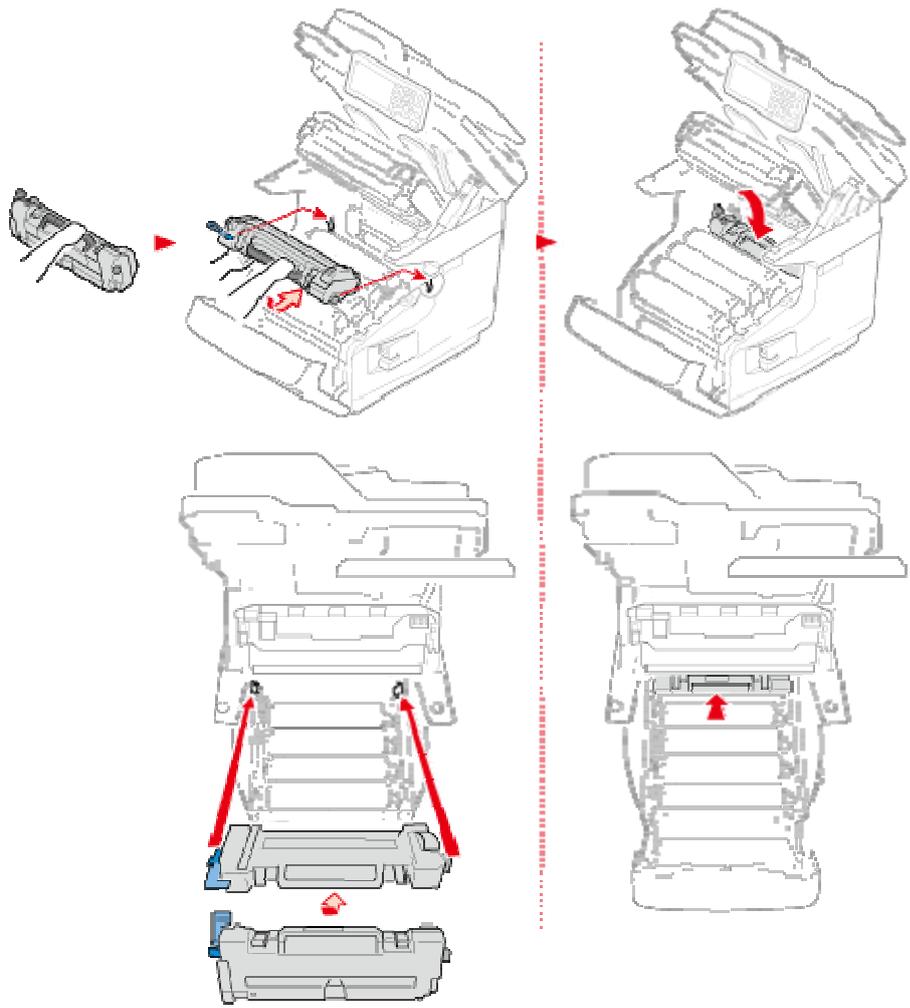

8. Push back the left locking lever (4) of the fuser unit to lock.

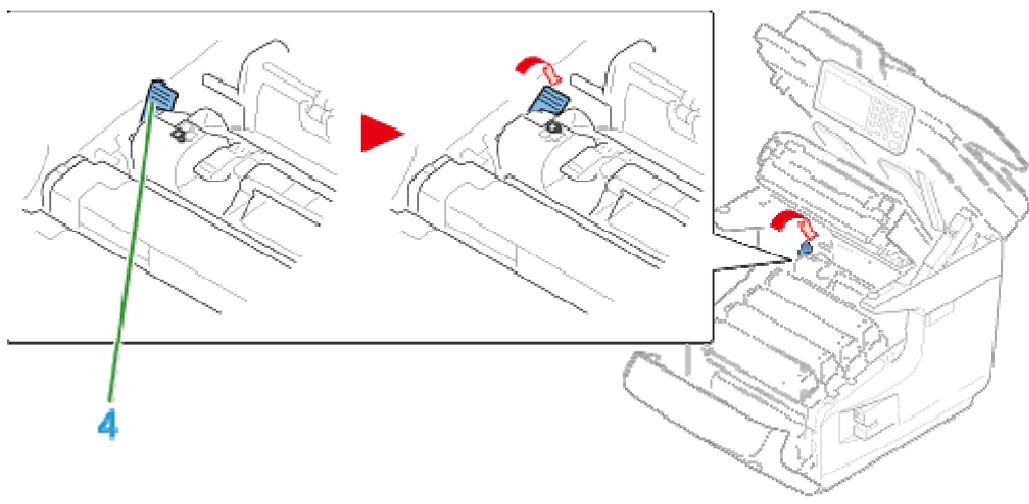


9. Close the Output Tray (3) by pushing the both sides of the Output Tray firmly.

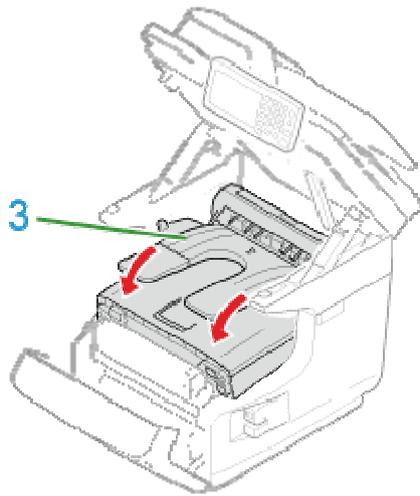

10. Close the front cover (2).

Note

The front cover cannot be closed if the output tray is not closed securely.

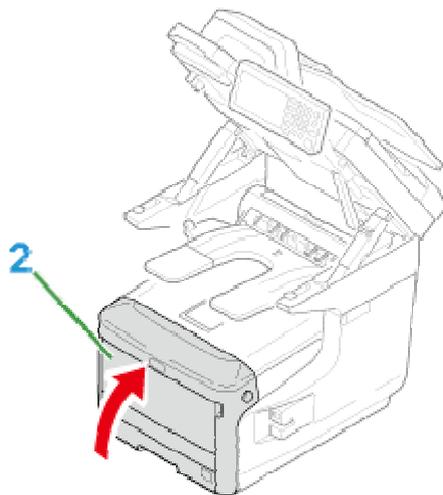

11. Hold the handle (A) to close the scanner unit.

