

STEP ONE - START OFF WITH YOUR BASE ON A FLAT SURFACE



STEP TWO - PLACE THE UPRIGHT ON TOP OFF THE BASE LINING UP ONE OF THE HOLES




SECURE A BOLT


STEP THREE - SECURE THE SECOND BOLT



STEP FOUR - INSERT THE MOUNTING BRACKET TO THE UPRIGHT

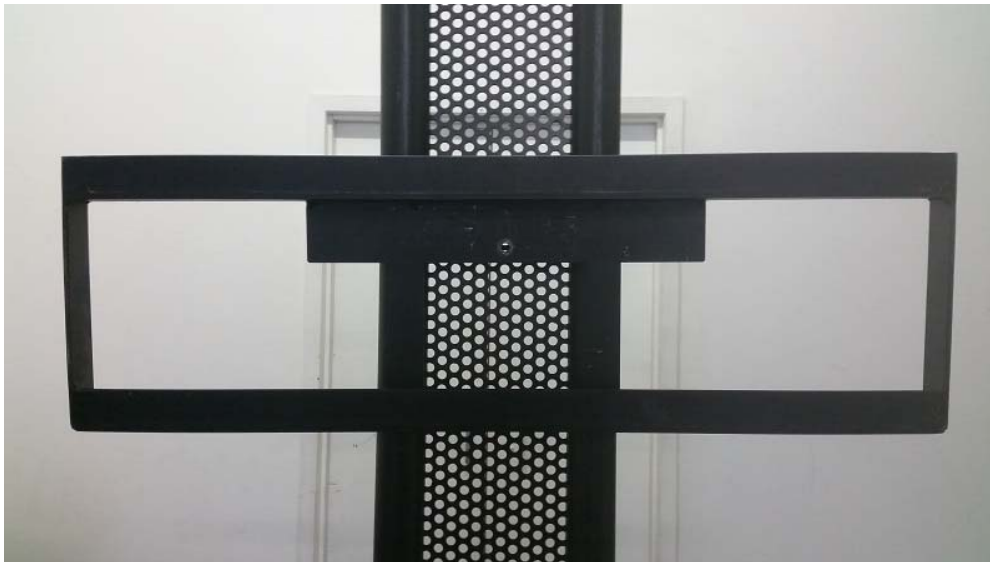

YOU WILL NEED TO INSERT THE HOOKS INTO THE HOLES AT THE HEIGHT YOU REQUIRE AND MAKE SURE YOU INSERT THE SECURING BOLT

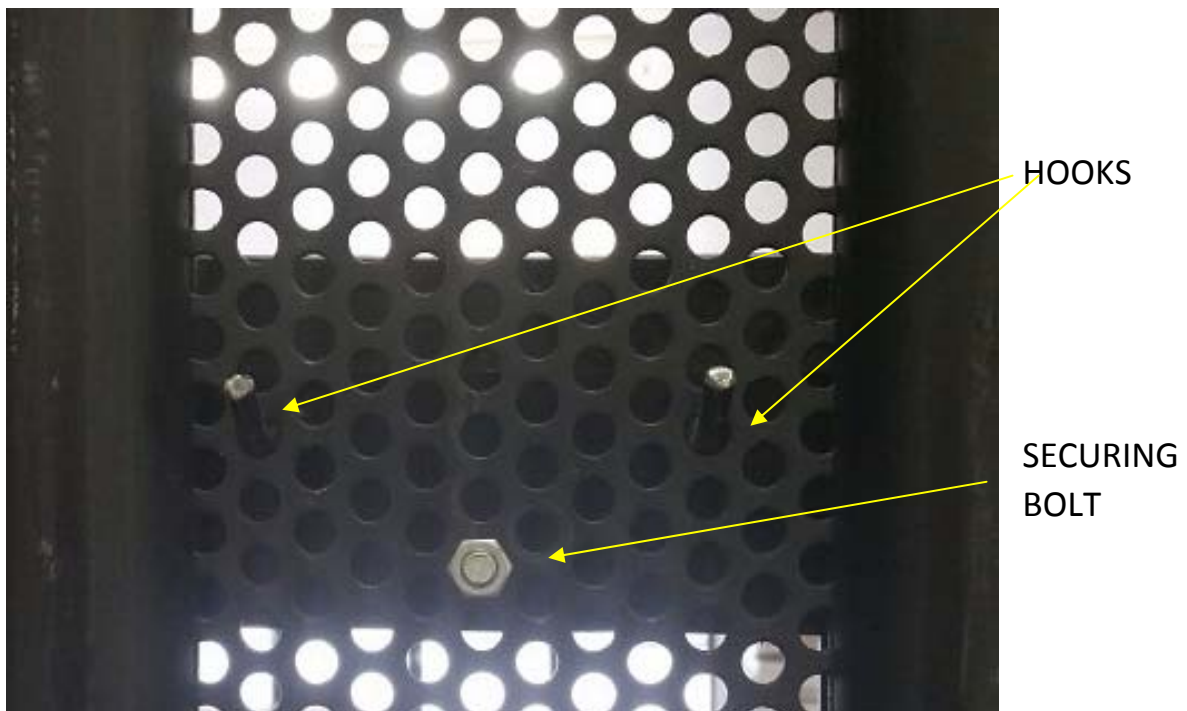



YOUR FLOOR STAND SHOULD NOW LOOK LIKE THIS

STEP FIVE - SECURE THE TV HOOKS TO THE BACK OF YOUR TV - WE DO NOT PROVIDE THE BOLTS FOR YOUR TV - IF YOU ARE RENTING A TV THE HOOKS WILL ALREADY BE ON THE TV



STEP SIX - LIFT THE TV ONTO THE MOUNTING BRACK ON THE STAND - MAKE SURE BOTH SETS OF FINGERS ON BOTH SIDES ARE ON CORRECTLY

